



Getting Started with Osmo Super Studio Mickey Mouse & Friends

Updated 9.06.2018
Version 1.0.0



Table of Contents

What's Included?	3
Main Menu Navigation	4
Game Setup	5
Chapters & Scenes	6
Drawing Activities	7
Decoration Mode	8
Replaying Chapters	9
Learn to Draw	10
Tips for Playing	11
Best Practices for Effective Osmo Detection	12
Other Questions	12

What's Included?

Each Osmo Super Studio set comes with all the drawing materials you need to get started!




Super Studio Marker

The marker contains magic ink that will disappear over time. **Only use Super Studio Markers.** Other art supplies will stain the Super Sketchpad.



Super Sweeper (Eraser)

Your Super Sweeper will work best when it's just a little damp. Once you've cleaned away your marker drawings, be sure to dry the page before moving on.

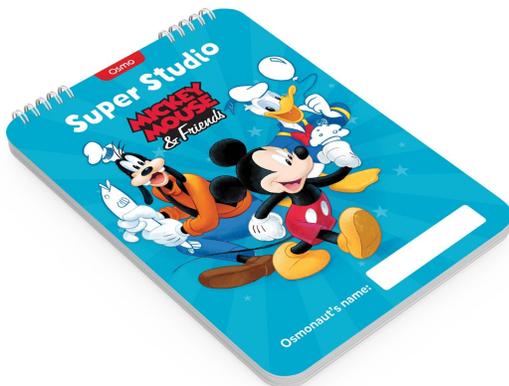

Super Sketchpad

Make sure your Super Sketchpad is up against your Osmo base. If it's too far away, the camera will have a hard time capturing your drawings.

Main Menu Navigation

Accessing your myOsmo Account

Tap  (or your avatar, if you're already logged in) in the upper right corner to view the myOsmo account screen. See this [guide to myOsmo accounts and profiles](#) for more information.

Start Playing

Tap  to start playing Super Studio! This will bring you to the Chapter Menu, where you can pick a chapter to start animating. If this is your first time playing, you will start the game with the first chapter, Mickey's Birthday Party.

Returning to the Main Menu

From the Chapter Menu, tap  to return to the Main Menu.

Returning to the Chapter Menu

From any chapter's Scene, tap  in the upper left corner until you reach the Chapter Menu.

From inside any drawing activity, tap  button, then tap  'Change Scene' to go to the Chapter Menu.

Returning to the Scene

From inside any drawing activity, tap  button, then tap  'Back' to return to the Scene.

Resetting Progress

Tap  in the upper left corner and tap 'Reset Progress'. Be careful! All progress and unlocks will be lost and reset.

Game Setup

To get started, grab your Super Sketchpad, Super Studio Marker and Super Sweeper.


1. Prep the Super Sweeper by lightly dampening it with water and wringing it out. Make sure that your Super Sweeper isn't soaking wet.
2. Have a paper towel handy to wipe off any excess water on the Super Sketchpad while playing.
3. Place your Super Sketchpad in front of the Osmo Base and tap  on the Main Menu.



Chapters & Scenes

After you tap **Play** on the Main Menu, you'll enter the Chapter Menu. Here, you can choose which chapter you'd like to play. To start playing a chapter:

1. Tap on a Chapter's button to enter its Scene.
 - a. If this is your first time playing, you will start with "Mickey's Birthday Party." Complete this scene to unlock the other chapters.
2. Once you're in the Scene, tap on any character or tap on any  icon at the bottom of the screen. A pop-up will appear, asking you to turn your Super Sketchpad to the correct page.
 - a. If this is your first time playing, you will start with the first activity.
3. Turn your Super Sketchpad to the requested page. The game will recognize the page and start the drawing activity!

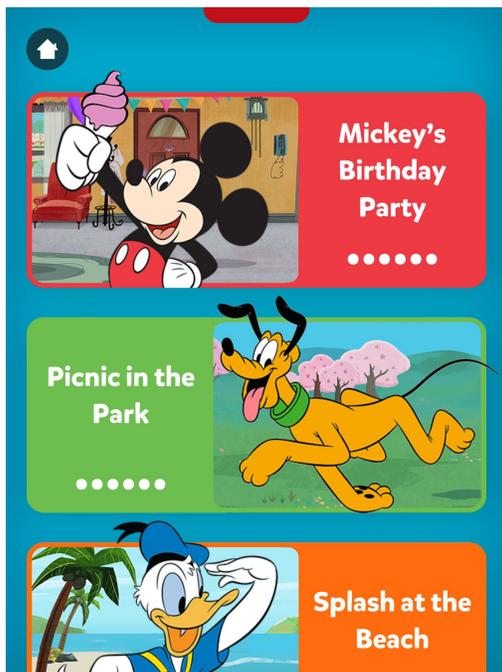

Chapter Menu



Scene



Drawing Activities

You're ready to start drawing! The narrator will begin by telling the story. Next, they will ask you to draw the missing pieces for each activity. To start drawing:

1. Listen to the narrator tell the story and follow along to hear a drawing request.
2. Use your Super Studio Marker to draw in the white areas of your Super Sketchpad!
3. When you're done drawing, tap  to start the show.
4. If you're not satisfied with your drawing, tap the  to try again.

At some parts of the show, the narrator will ask you to erase your drawing and draw something new. When asked:


1. Use your Super Sweeper to erase your drawing. Use a paper towel to wipe off any excess water on the Super Sketchpad page.
2. Draw something new and then tap  to continue the show!

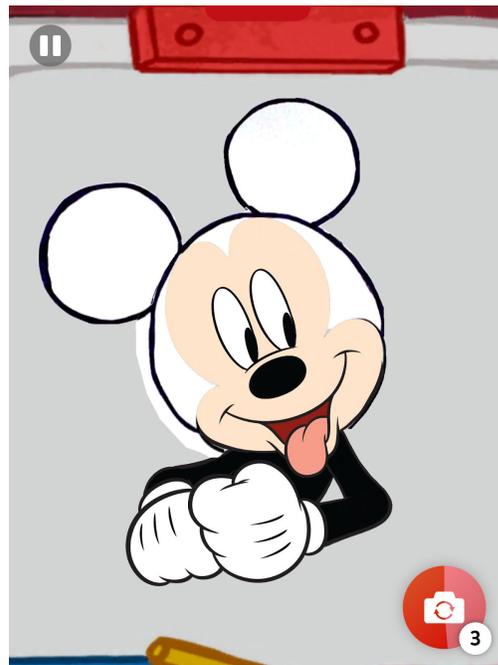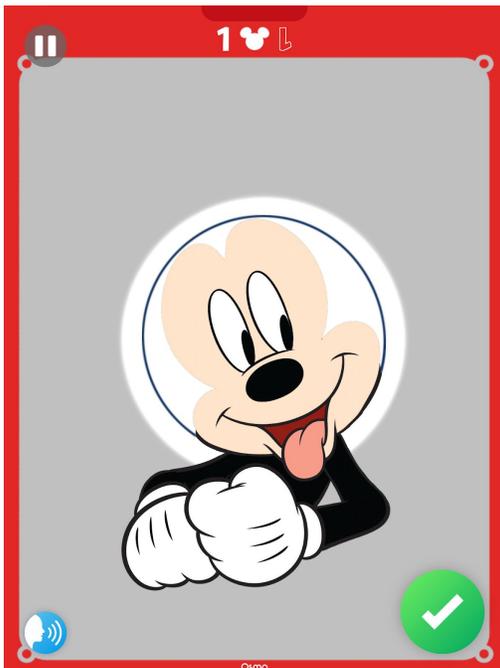

Decoration Mode

Once you've animated a Scene, you'll unlock Decoration Mode. In Decoration Mode, you can customize the Scene and draw different items to decorate your show. To use Decoration Mode:


1. Select any Chapter in the Chapter Menu to enter the Scene.
2. Swipe left and right to pan through the Scene and look for a  symbol on an object. These are decorations you can customize!
3. Tap on any  to enter Decoration Mode.
4. When prompted by the game, turn your Super Sketchpad to page 32.
5. Draw anything you want to decorate the Scene! When you are finished, tap  to take a photo. Your decoration is now in the Scene!

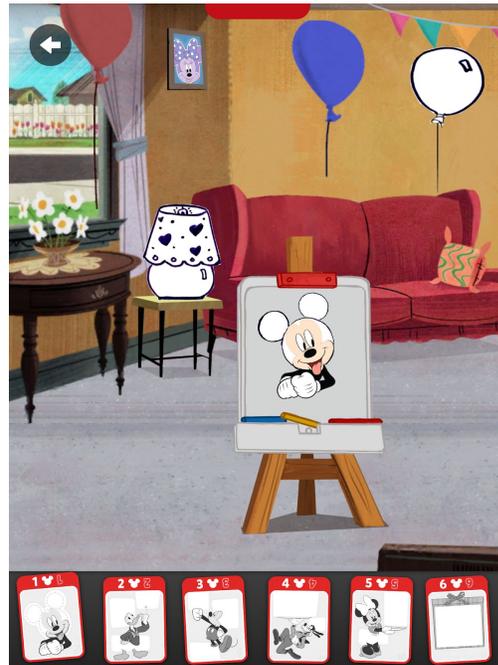

Replaying Chapters

After completing a Chapter, you can go back and interact with your show again!

Mini-Games

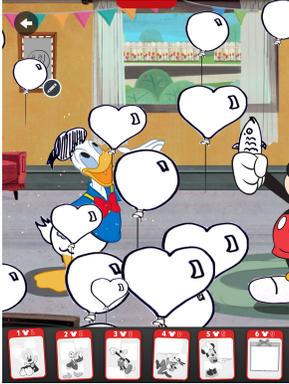


Tap on the characters in a Scene to watch the animations again! Some characters have hidden mini-games. Can you find them all? Hint: tap on Donald in “Mickey's Birthday Party” or tap on Daisy in “Splash at the Beach”, just to name a few!

Draw the Show Again

You can go back and redraw any part of a show! To draw a character animation again:

1. Select any Chapter in the Chapter Menu to enter the Scene.
2. Decide which character you would like to draw and tap on the  at the bottom of the screen for that character. This will bring you back into the activity!
3. If you want to edit a part of your drawing, you can tap and hold on a character until  buttons appear. Next, tap on the part that you want to redraw, and the activity will pick up from there!

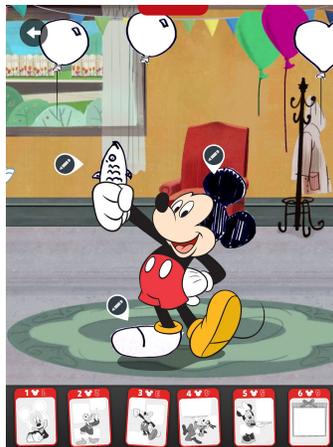


Learn to Draw

Learn to draw your favorite Disney characters, just like a Disney artist! To enter “Learn to Draw”:

1. In the Chapter Menu, scroll down to the bottom and tap the “Learn to Draw” button.



2. When prompted by the game, turn your Super Sketchpad to page 31.
3. Tap on a drawing easel or tap  at the bottom of the screen to start the drawing lessons!
 - a. If this is your first time playing, you will start at the first lesson.
4. Follow the instructions to draw each part of the character! To move to the next step, tap .
5. If you would like to repeat a step, tap  to see and hear the previous drawing instruction again.
6. When your drawing is completed, tap  to add your drawing to the gallery!

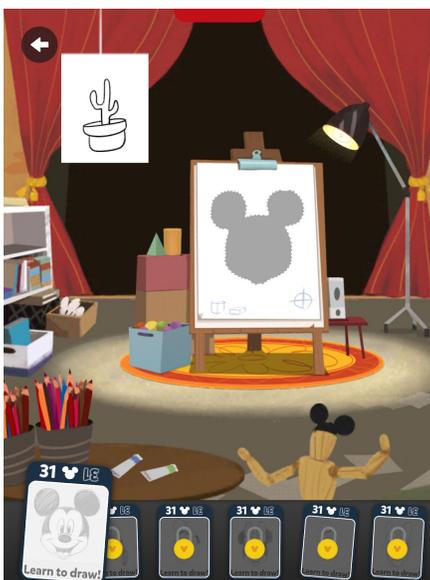

Tips for Playing

To help you along your Super Studio show, here are some tips on how to play!

Repeat the Narration



If you would like to hear the story and drawing request again, you can tap the narration button to replay the audio!

Drawing Inspiration



Need some ideas about what to draw? Tap the pen button and a drawing suggestion will appear! Follow the lines to draw the suggestion or draw your own idea. It can be anything!

Protect your Markers

Your Super Studio Markers contain specifically formulated ink for the best drawing experience. When you are not using them, be sure to replace the cap tightly to prevent your markers from drying out.

Exercise your Creativity!

The narrator will always give you a drawing suggestion, but you can draw whatever you like. Stretch your imagination by drawing different things for each page and make your show unlike anyone else's! When you've completed a Scene, make the show even more unique with your own custom decorations.

Best Practices for Effective Osmo Detection



1. Keep the reflector centered along the top edge of your device so the camera can see the play space.
2. Play in a well lit room, without hard shadows.
3. Make sure the reflector is clean.
4. Make sure you are using a device that is compatible with Osmo. Please check [this list of Osmo-compatible devices](#).
5. If you experience any issues despite this setup, please reach out to support@playosmo.com for assistance.

Other Questions

What do I do if I lose a piece?

Please reach out to support@playosmo.com for assistance.

Can I clean the Super Sketchpad?

After completing each drawing activity, make sure your Super Sketchpad pages are wiped clean and dry. This will help prevent the marker ink from bleeding. If the Super Sketchpad pages are stained, you can clean them with Clorox® brand disinfecting wipes or a similar cleaning product.